


THIS IS A LOW-RESOLUTION BLACK-AND-WHITE FREE VERSION.

**your new**

**ROYAL**

**portable**

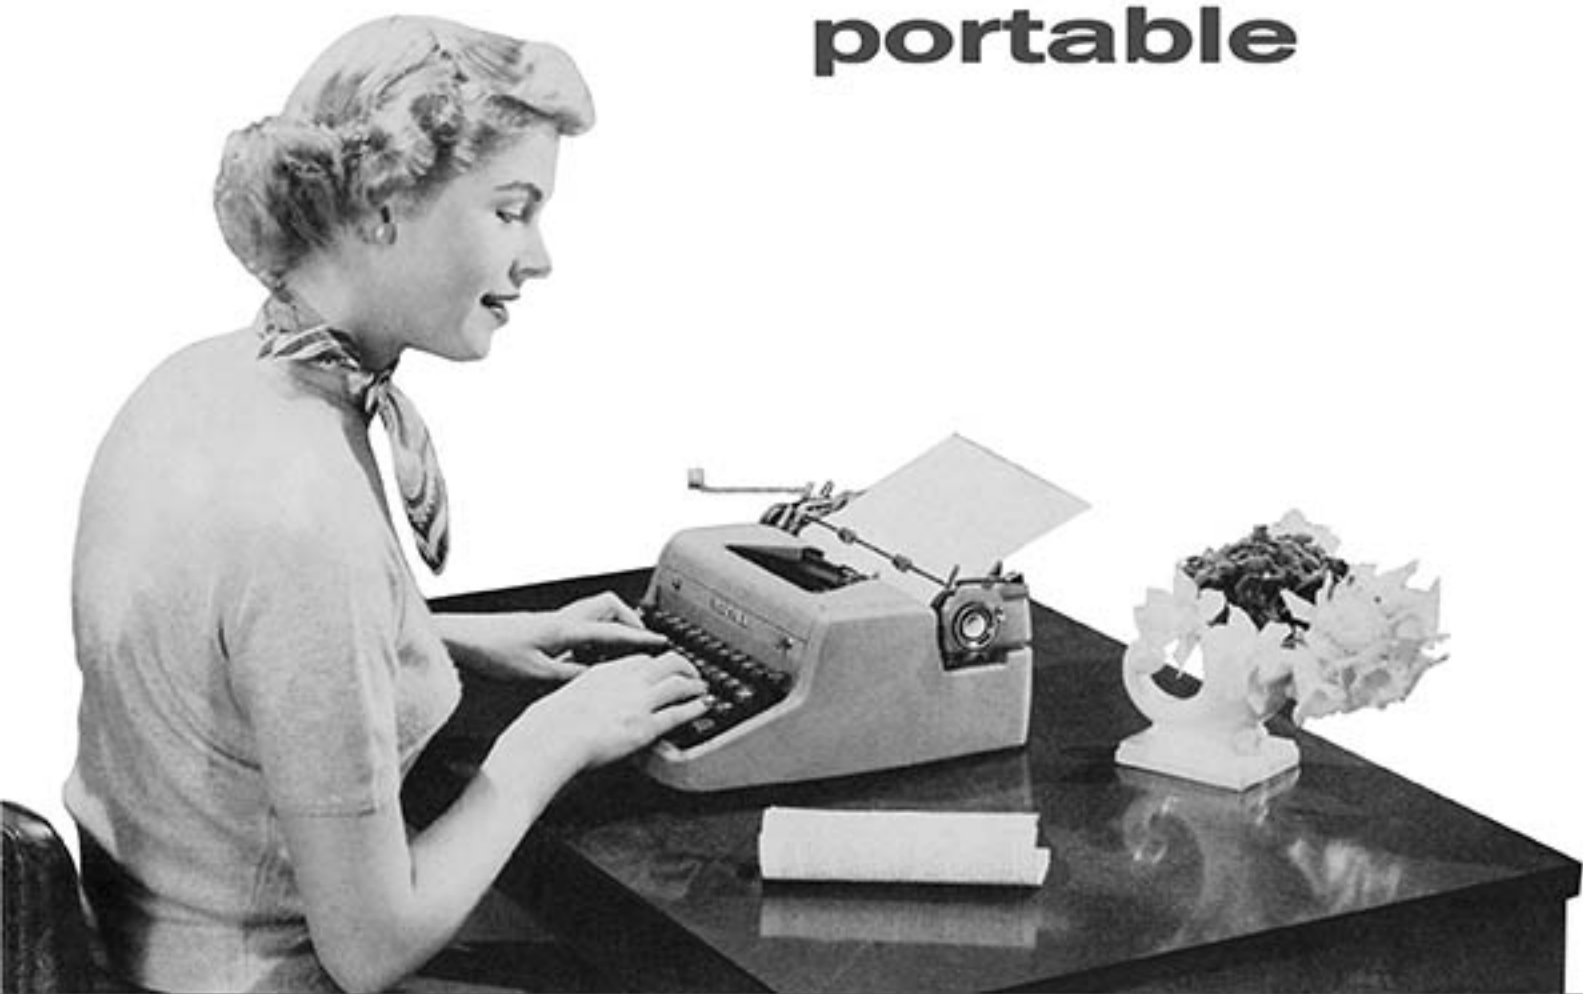

**royal  
typewriter  
company, inc.**

*2 Park Avenue*

*New York 16, N. Y., U. S. A.*

**ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:**

A-825-AC-4155

PRINTED IN THE UNITED STATES OF AMERICA

**CLASSICVINTAGETYPEWRITERS.COM**

# your new **ROYAL** **portable**

*combines precision workmanship, found only on the finest office typewriter, with sparkling new features that make it the most modern and durable portable typewriter in the world. It's truly an office typewriter in portable size.*



*Your Royal is the only portable typewriter that can be tuned to your own typing level. \*Speed Selector enables you to synchronize the action of the carriage and keys to your own typing speed. "Touch Control" permits you to tailor the sensitivity of the keys to your own individual touch. The Line Meter\* automatically tells you how many lines of typing space you have left when you near the bottom of a page. "Magic" Margin permits you to set margins instantly, easily and automatically. These features, as well as Visible Tab Set\*, Push Button Top, Automatic Paper Lock\*, greater paper capacity and many others, help you to type faster, better, with less error*

*Read this booklet carefully. Its complete instructions on the use of Royal's convenience features will help you to get the most out of your new Portable Typewriter. You will also find some helpful tips on touch typing beginning on page 14.*

## **index**

- 3. Inserting & Removing Paper**
- 4. Line Spacing**
- 5. Using the Scales**
- 6. Carriage Spacing**
- 7. Keyboard & Ribbon Controls**
- 8. "Magic" Margin**
- 8. Speed Selector\***
- 9. Line Meter\***
- 9. "Touch Control"**
- 10. Tabulating\***
- 10. Push Button Top**
- 11. Ribbon Changing**
- 11. Care of Portable**
- 11. Portable Case**
- 12. Feature Chart**

\*Not on Keystone Model

Copyright 1953 by Royal Typewriter Company, Inc.

"Magic" and "Touch Control" are registered trademarks of Royal Typewriter Company, Inc.

**ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:**

**CLASSICVINTAGETYPEWRITERS.COM**

## inserting paper


A. Pull forward Automatic Paper Lock\* and drop paper behind cylinder onto Royal's single wide rear feed roll which acts as a straight edge, guiding the left edge of paper against paper guide.

B. Turn either cylinder knob until paper comes up under the Automatic Paper Lock. The rollers on the Paper Lock should be spaced to divide the paper in thirds. Flip back the lock with the right thumb.

\* Lilt "Paper Bail" on Keystone Model

## adjusting and removing paper

If it is necessary to adjust the paper after it has been inserted into the machine, pull forward the Paper Lock and the Paper Release Lever located to the right of the Paper Lock Lever. Adjust the paper, then push back the Paper Lock and the Paper Release Lever. Remove paper by pulling forward these same two levers or by rolling it out by means of either cylinder knob.

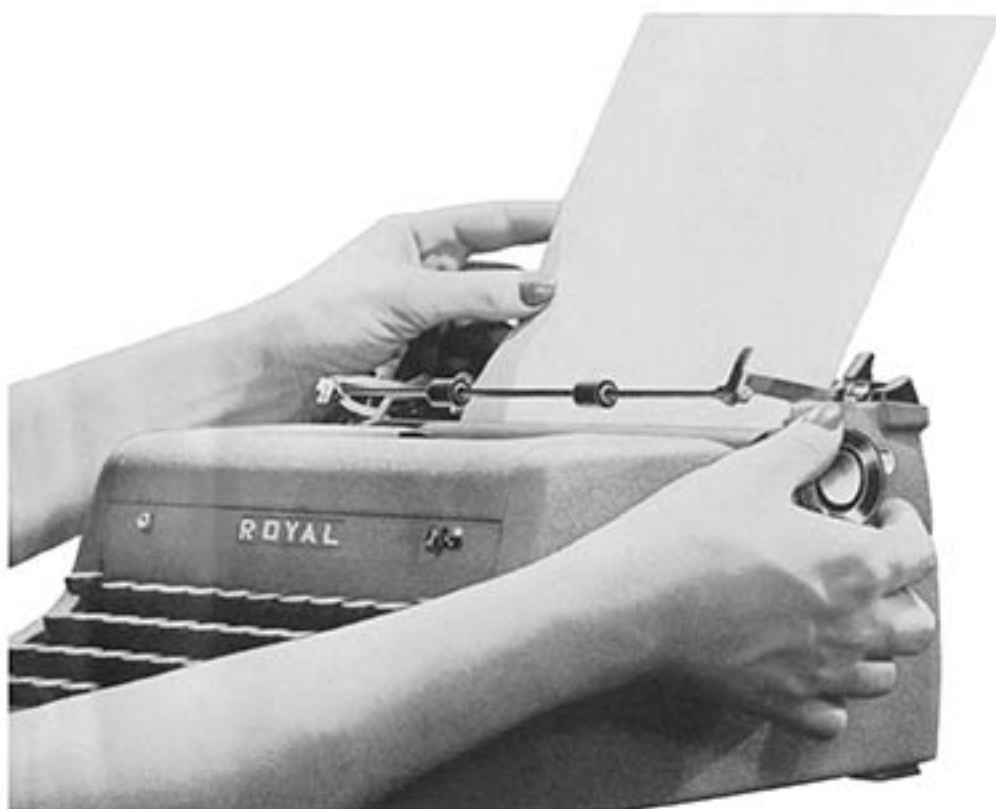


# line spacing

- 1** *Line Finder.* To change the line spacing to a fraction of a line temporarily, as when typing chemical or mathematical formulae ( $A^2+B^2$  or  $H_2O$ ), move the Line Finder forward and rotate the cylinder to the desired position.

To return to the exact original spacing, move the Line Finder to its rearward position.

- 2** *Line Space Selector.* You have your choice of single, double or triple spacing between the lines by moving the Line Space Selector to the desired number.

- 3** *Variable Line Spacer.* To make a permanent change in the line spacing, press in the Variable Line Spacer button while rotating the Cylinder Knob. Locate the work exactly where you want it, then release the button. The spacing is now permanently changed to the new set-up.

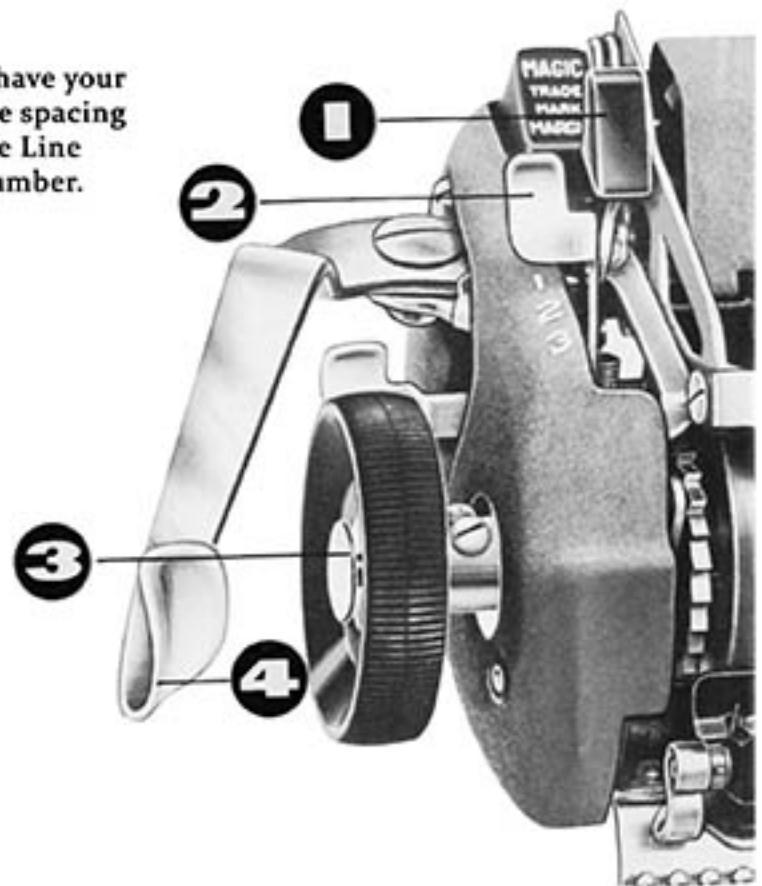

- 4** *Line Space Lever.* Line spacing and carriage return are accomplished simultaneously with a single, brisk sweep of the left hand against the Line Space Lever. Royal's specially designed finger-piece brings increased comfort and ease to this operation.

## using the scales

**1** *The Paper Guide Scale.* The Paper Guide is usually set at zero. For positioning a series of cards or envelopes, the Paper Guide may be set to the right of zero.

*The Tabulator Scale.* The Tabulator Scale is a continuation of the Paper Guide Scale and can be seen by tilting back the Paper Table. This scale is used to set the \*tab stops which are located directly behind it.

**2** *The Paper Lock Scale.* The Paper Lock Scale spans the cylinder and is completely visible at all times. Use this scale to compute measurements on the paper. To determine margins or tab settings used in the upper part of the page, simply raise the Paper Lock, hold the paper under the scales and make the readings.


**3** *Card and Writing Line Scale.* This scale is used to align characters with work already on the page or card. The edge of the scale denotes the base of the writing line. To write on cards or envelopes, raise the Disappearing Card Finger at the right end of this scale.

**4** *The Cylinder Scale.* Use this scale to locate the carriage at a specific printing point, as in setting margins, finding the center of a page, and centering headings.

*To find the center of a page,* add the left and right scale readings of the paper and divide by two. For instance, if the left edge of the paper is set at 0, and the reading at the right edge is 84, the center is 42. Move the carriage until the figure 42 on the cylinder scale is located at the printing point, and your page is centered.

*To center a heading,* locate the center of the page as above. Then press the Back Space Key once for each two letters and spaces in the heading.

All Scales are synchronized and read from left to right.

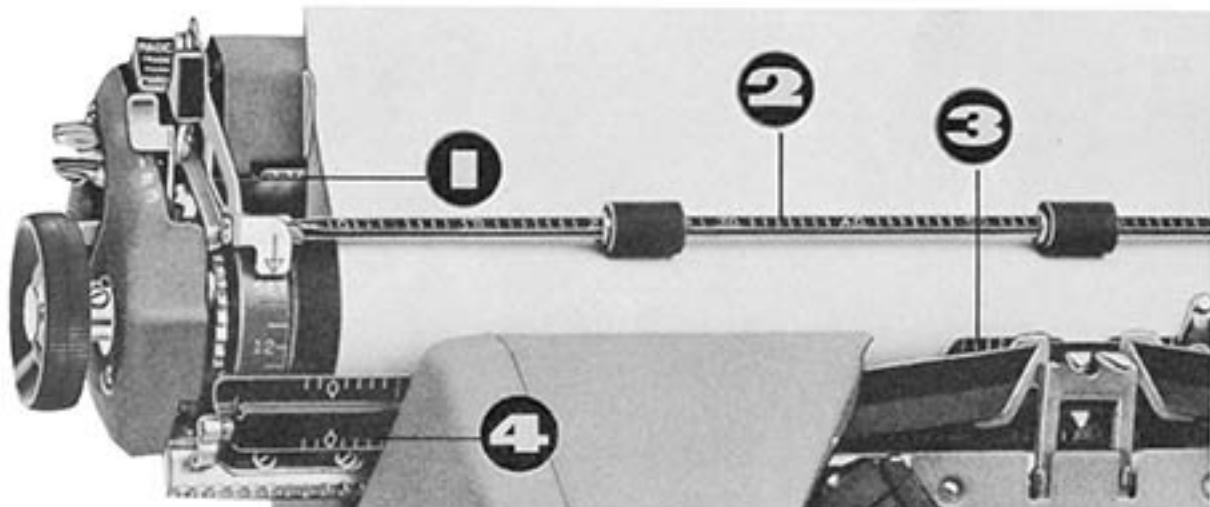


THIS IS A LOW-RESOLUTION BLACK-AND-WHITE FREE VERSION.

# carriage spacing

## **Carriage Release Levers.**

The carriage may be released and moved any number of spaces by holding in either the left or right Carriage Release Lever.

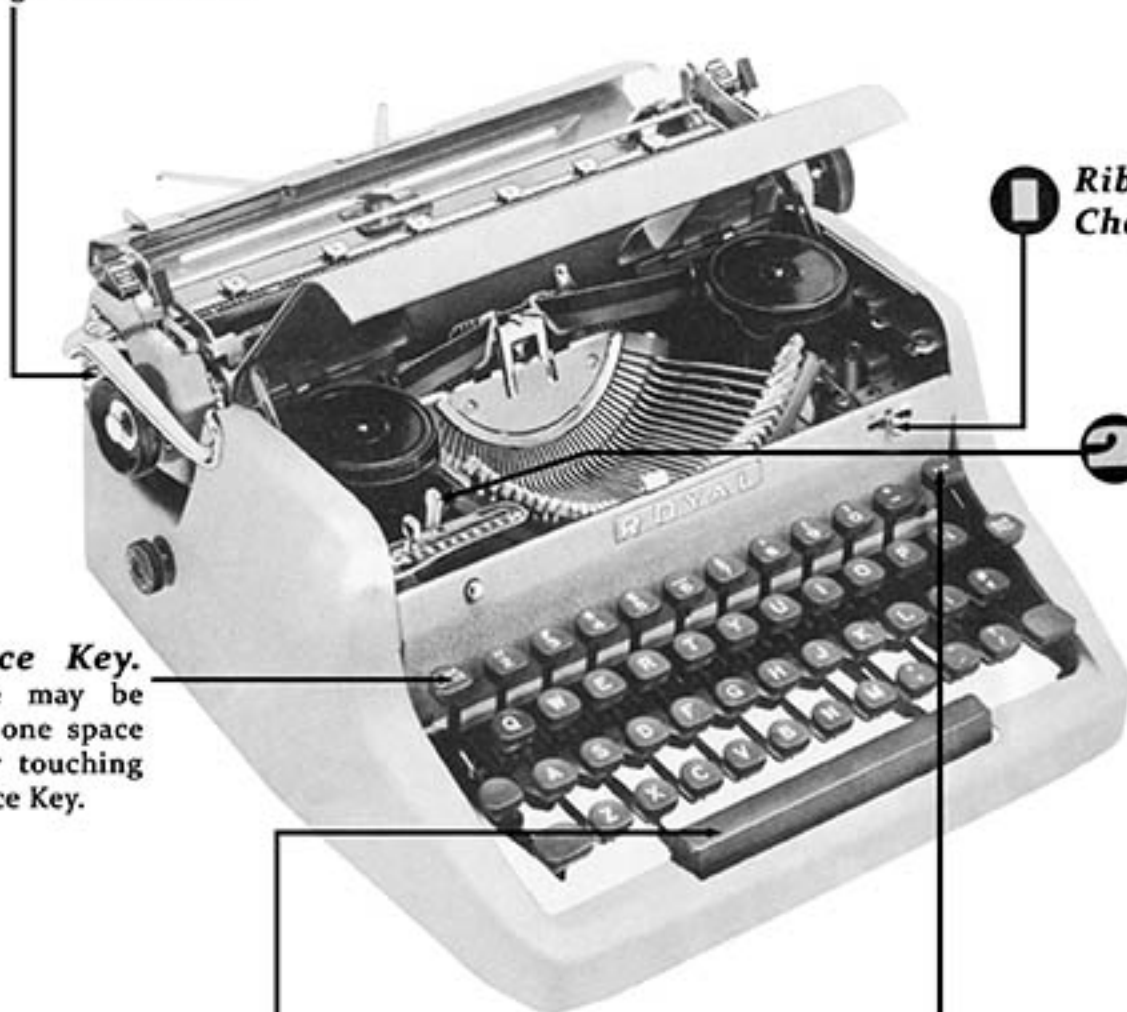

**Ribbon Color Change Lever**

**Ribbon Reverse Lever**

## **Back Space Key.**

The carriage may be moved back one space at a time by touching the Back Space Key.

**Speed Spacer.** Royal's new space bar is faster and easier to operate. The carriage can be moved ahead one space at a time by touching the Speed Spacer.

**\*Tab Key.** The carriage may be moved to pre-set positions by touching "Tab" Key (see separate section on Royal's Visible Tab Setting).

\*Not on F **ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:**

**CLASSICVINTAGETYPEWRITERS.COM**



THIS IS A LOW-RESOLUTION BLACK-AND-WHITE FREE VERSION.

# fully standard keyboard

The Keyboard and controls on your Royal are like a standard office typewriter . . . designed for natural ease in typing. New plastic keys are Finger-Flow in shape. There's no obstructing semi-circle in front of the key to brush fingers or cause untidy work. Letters are inlaid right through the keys and cannot rub off; they stay clean, too, because they are exactly flush with key surface.

**To type capitals or upper case characters** press either Shift Key at the extreme ends of the lowest bank of letter keys, holding it down while you use the letter key.

**To type capitals or upper case characters in sequence** press the Shift Lock Key, just above the left Shift Key, which holds the segment in the upper case until you press either Shift Key.

**Warning Bell and Margin Release.** When in typing you approach the right margin, your warning bell will ring. After you have typed several more characters, the line lock will take effect, locking the type bars to prevent you from typing one character over another.

**To type past the right margin line lock,** or to type within your left hand margin, press Margin Release Key.

## ribbon color change and reverse

**1 Ribbon Color Change Lever** permits you to use either the upper or lower halves of the ribbon. To type using the lower, or red, half of a two-color ribbon, move the lever to the red dot. To use the upper, or black, half of the ribbon, move the lever to the black dot. To make the ribbon inoperative for stencil writing, move the lever to the white dot.

**2 Ribbon Reverse Lever.** The ribbon reverses itself automatically when the end of the ribbon is reached. However, it may be reversed at any time by moving the Ribbon Reverse Lever to its opposite position.

*When purchasing new ribbons, be sure to get a ribbon made expressly for the Royal Portable.*

ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:  
[CLASSICVINTAGETYPEWRITERS.COM](http://CLASSICVINTAGETYPEWRITERS.COM)

THIS IS A LOW-RESOLUTION BLACK-AND-WHITE FREE VERSION.




## **“magic” margin**

“Magic” Margin allows you to set margins automatically without disturbing paper in machine. To set left margin, hold in the left carriage re-lease lever and left “Magic” Margin button while moving carriage to point you wish your writing line to start—release, and it’s set. To set the right margin, merely follow same procedure, using right carriage release lever and right “Magic” Margin button.

## **\*speed selector**

Now for the first time on a portable typewriter, you can tune your portable to your individual speed preference with Royal’s amazing new Speed Selector. Move the carriage to the extreme right and you will see the Speed Selector Dial. By turning the knob you will be able to change the setting on this dial and synchronize the speed of the carriage and keys to your individual typing level. As you use your new Royal Portable, you will be able to determine which setting is best for you.


\*Not on Keystone Model

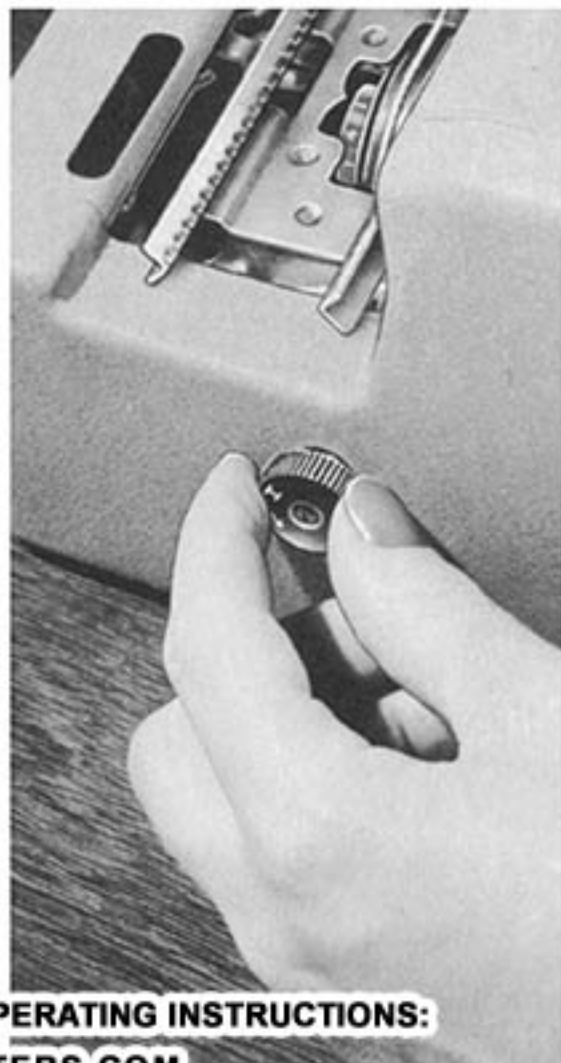

ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:  
[CLASSICVINTAGETYPEWRITERS.COM](http://CLASSICVINTAGETYPEWRITERS.COM)



THIS IS A LOW-RESOLUTION BLACK-AND-WHITE FREE VERSION.

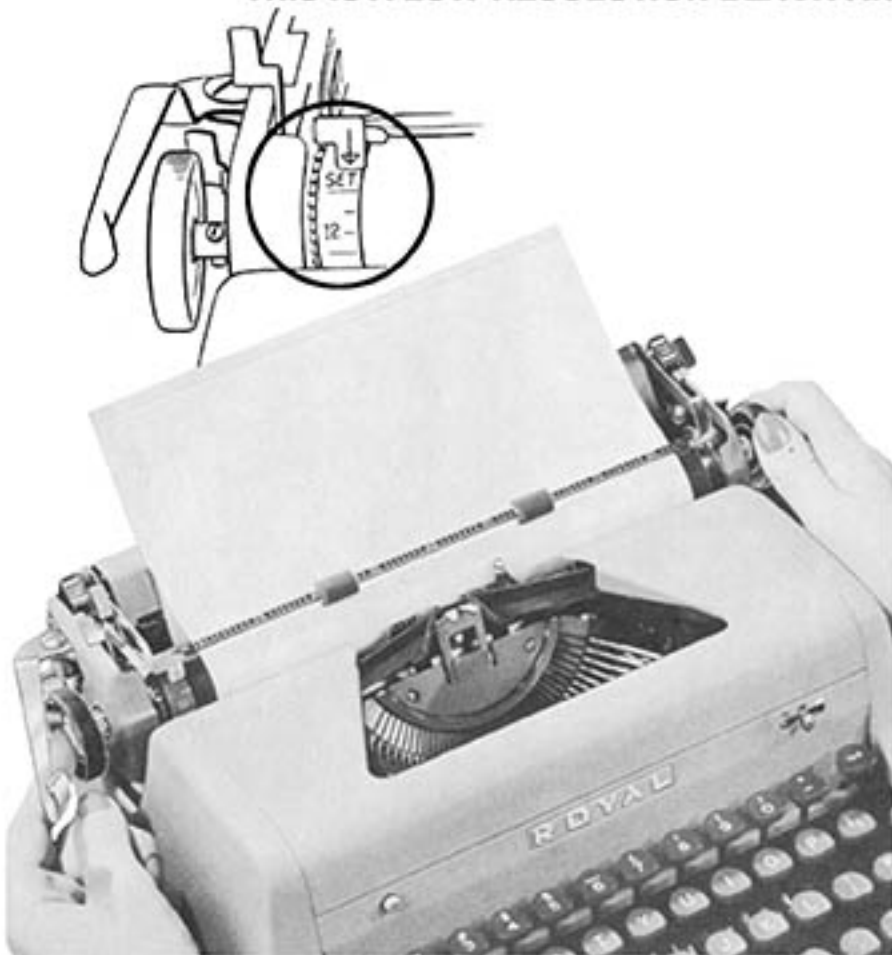

\*Not on Keystone Model

## \*line meter

This amazing new device automatically tells you how many lines you have left when you are typing near the bottom of a page. Simply insert paper in regular manner and turn either cylinder knob until the red SET line on the Line Meter appears directly beneath the arrow. Then hold the Variable Line Spacer button all the way in while turning the right cylinder knob until the back edge of the paper is aligned with the two red dots on the Paper Support. (Be certain to raise the Paper Support to its uppermost position.) Release the Variable Line Spacer button, then turn the cylinder to the desired typing position. As you near the bottom of the page, the numbers on the Linemeter will automatically indicate exactly how many lines of typing space you have left.

*If you type on a paper or card that is too short to be aligned with the red dots on the Paper Support, use the same directions as above, but align it with the red lines directly behind the cylinder instead of the red dots on the Paper Support.*

## “touch control”

This feature, made famous on Royal Office Typewriters, adjusts the sensitivity of the keys to your own touch. Move the “Touch Control” Lever toward the high numbers and the keys automatically adjust themselves for a firm or heavy touch. If you have a light touch move the lever to the low numbers.



ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:

[CLASSICVINTAGETYPEWRITERS.COM](http://CLASSICVINTAGETYPEWRITERS.COM)

## \*tabulating

Royal's Visible Tab stops are made instantly accessible by simply tilting back the Paper Table. These tab stops are used to mark off various indentations and to halt the carriage at these points. To set a tab stop, note the reading on the cylinder scale where you wish the carriage to halt, then press down on the tab stop and move it till the red line on it is aligned with the same reading on the Tabulator Scale. To tabulate—that is, to move automatically from one column or indentation to the next, hold down the Tab Key until the carriage halts.

\*Not on Keystone Model

## push button top

Press the button conveniently located directly over the left side of the keyboard, and, "presto," the Push Button Top automatically springs wide open making the interior of your Royal Portable completely accessible for adjusting "Touch Control" or for type cleaning and rapid ribbon changing.



ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:

[CLASSICVINTAGETYPEWRITERS.COM](http://CLASSICVINTAGETYPEWRITERS.COM)

## 4 step ribbon change

1. Press Shift Lock Key and move Color Control lever to red dot. Then depress any two central keys at the same time so that the type bars stand up and the Ribbon Carrier is raised. Disengage the ribbon from the Ribbon Carrier.

2. Raise the Push Button Top and wind ribbon as far as possible on either spool. Slip the ribbon out of the small guides beside each ribbon cup. Lift of both spools, unhook and discard used ribbon from empty spool.

3. Hook the new ribbon to the empty spool and replace both spools on their hubs, making sure the ribbon travels from the back of each spool as shown in the illustration.

4. Feed ribbon through small guides and replace in Ribbon Carrier. Flick back the type bars and release the Shift Lock. Take up ribbon slack by turning either spool. Lower the Push Button Top and you are ready to type.



## care of your royal portable

To increase your typing satisfaction, follow these simple rules:

- From time to time, dust the outside and accessible parts with a brush or dry cloth.
- Clean the type frequently with the dry bristle brush furnished with your Royal Portable.
- Wipe the carriage rails and other nickel parts occasionally with a cloth slightly moistened with a very little oil.
- Don't erase directly over the printing point. Move the carriage to either side, then erase.
- Keep your Portable covered when not in use.

Record your Royal Portable serial numbers on your bill of sale, this instruction book, or in some other safe place. You will find it by moving the carriage to the extreme right and looking down at ~~the bottom of the carriage~~.  
always be ~~checked by the owner~~

## royal portable case

Your Royal Portable comes in a highly-styled fibreglas carrying case that is lightweight and very durable. Clips inside the top of the case are designed to hold paper and envelopes as well as the type cleaning brush.


If you like, use your Royal Portable in its case. Simply open the cover and you are ready to type. Or, remove the top of the case by holding the Hinge Lock toward you and slide off the top to the right.

For the quietest typing of all, remove the Portable from the case. To do this, release the four base clamps and lift the Portable from the base of the case. To replace the Portable in case, set it on the feet pins and re-engage the clamps. Position the carriage at the center and close the case.

ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:

CLASSICVINTAGETYPEWRITERS.COM

# feature chart

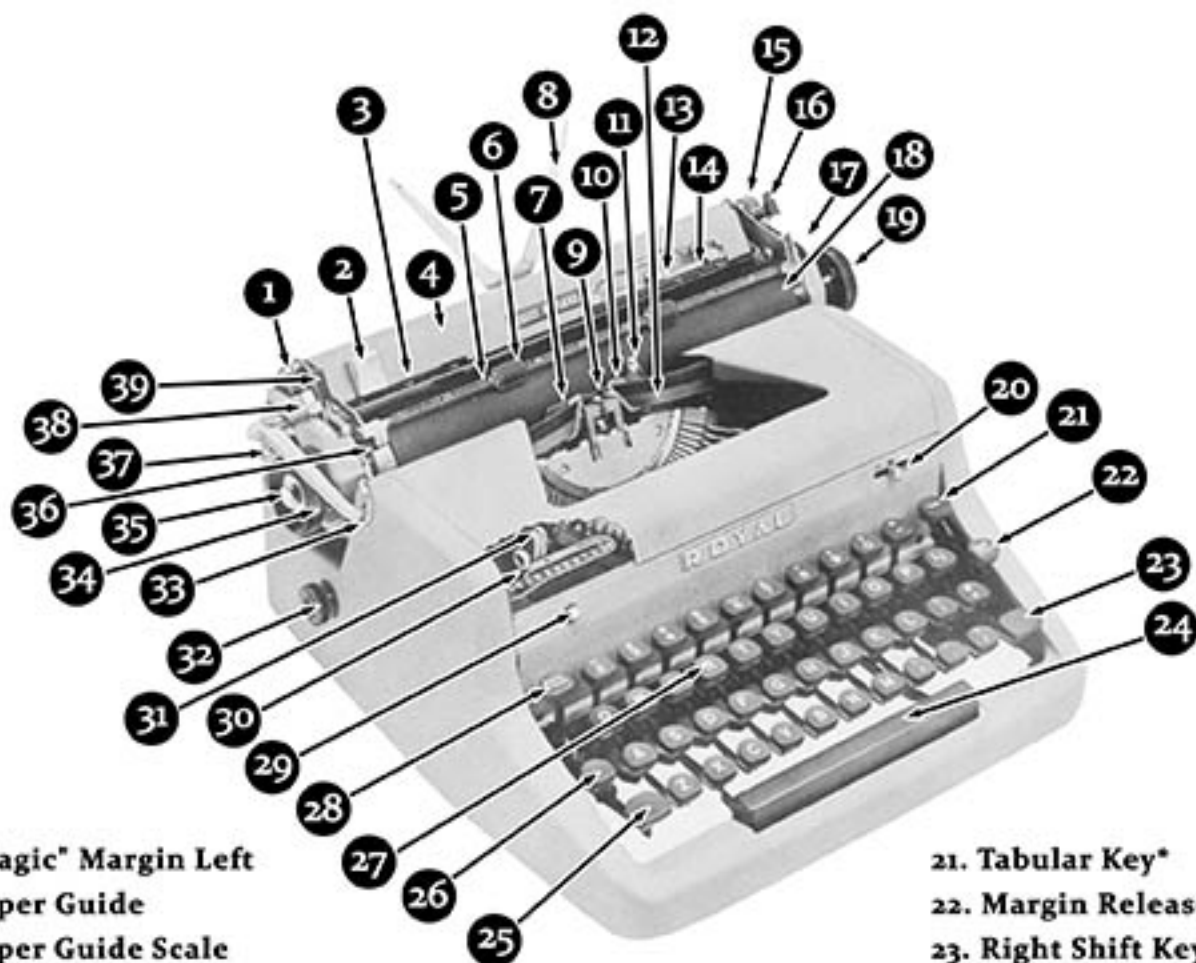

1. "Magic" Margin Left
  2. Paper Guide
  3. Paper Guide Scale
  4. Paper Table
  5. Automatic Paper Lock\*\*
  6. Paper Lock Rolls
  7. Writing Line Scale
  8. \*Adjustable Paper Support
  9. Carriage Position Indicator
  10. Ribbon Carrier
  11. Disappearing Card Finger
  12. Cylinder Scale
  13. Visible Tab Stops
  14. Tabulator Scale
  15. "Magic" Margin Right
  16. Paper Release Lever
  17. Right Carriage Release
  18. Cylinder
  19. Right Cylinder Knob
  20. Ribbon Color Change Lever
  21. Tabular Key\*
  22. Margin Release Key
  23. Right Shift Key
  24. Speed Spacer
  25. Left Shift Key
  26. Shift Lock Key
  27. Fully Standard Keyboard
  28. Back Space Key
  29. Push Button Top
  30. Touch Control
  31. Ribbon Reverse
  32. Speed Selector Knob\*
  33. Line Space Lever
  34. Left Cylinder Knob
  35. Variable Spacer
  36. Line Meter\*
  37. Left Carriage Release
  38. Line Space Selector
  39. Line Finder
- \* Not on Keystone Model  
\*\* Paper Bail on Keystone Model

ORDER PREMIUM HIGH-RESOLUTION COLOR OPERATING INSTRUCTIONS:

[CLASSICVINTAGETYPEWRITERS.COM](http://CLASSICVINTAGETYPEWRITERS.COM)